



SWIFT. SILENT. SECURE.

BUSHING & NUT SET FOR POWER-POLE® BLADE MODELS INSTRUCTIONS

Hardware (Included):

- A.** (5) 3/8" Nylon Lock Nuts
(7) for 10' Model
- B.** (4) 3/8" Bushings
(inner knuckle joint)
- C.** (8) 3/8" Bushings (Middle)
(12) for 10' Model
- D.** (4) 3/8" Bearings (out-
side stern bracket)
- E.** (2) 5/16" Nylon Lock Nuts
- F.** (2) Ram-Spacers
- G.** (2) 3/8" Bushings
(opposite side of ram spacers)
- H.** (2) 5/16" Bearings
(outside cylinder mount)
- I.** (2) 1/4" Nylon Lock Nuts
- J.** (4) 1/4" White Bushings
- K.** (1) Spreader Block
- L.** (4) 3/8" Bushings
(inner stern bracket)
- M.** (6) 3/8" Bearings (Outer)
(10) for 10' Model
- N.** (4) 3/8" Bushings

Installation Tools

- 7/16", 1/2" and 9/16" Wrench
- 7/16", 1/2" and 9/16" Socket
- Ratchet
- Protective Gloves
- 1/4" Flat Punch
- Rubber Mallet


NOTES:

- For all bushing replacements, lower the Power-Pole Anchor so the spike is touching the ground.
- Follow diagrams for proper hardware installation.

WARNING: Never touch spike with bare hands.
Spike may become fibrous after sun exposure and use.




Spreader Block (K) Use

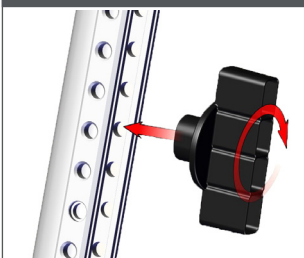

Need help? Contact our Customer Service Team at **1 + 813.689.9932 Option 2**

BUSHING SET FOR BLADE KNUCKLE (Upper or Lower)

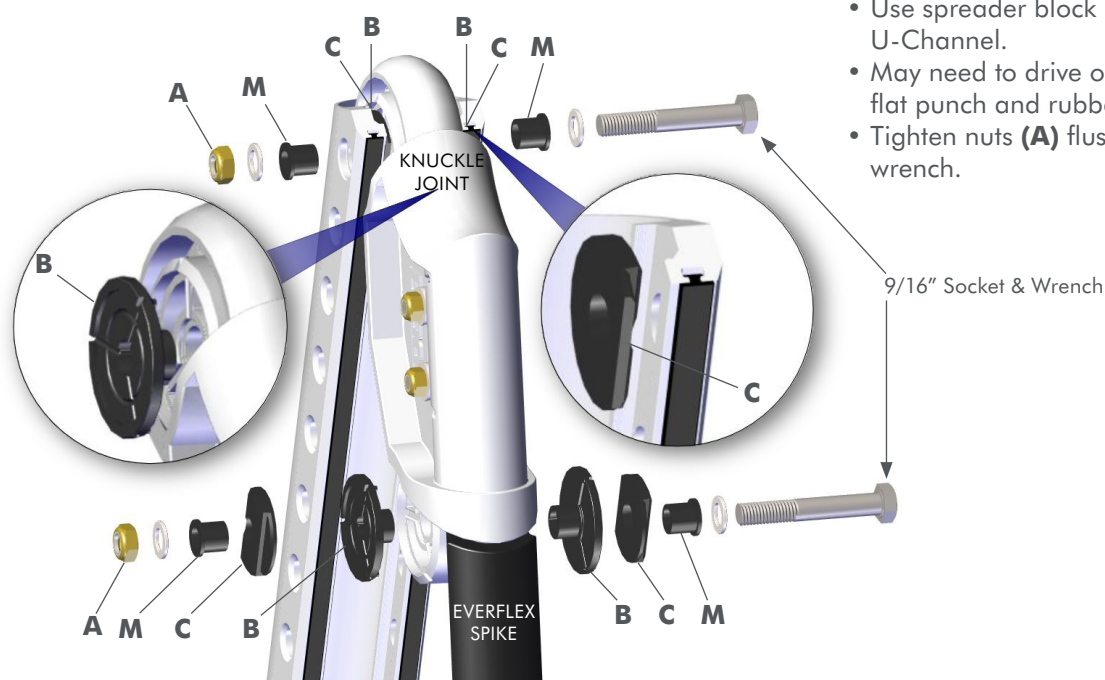


NOTES:

- Use spreader block (**K**) to remove knuckle from U-Channel.
- May need to drive out bearings (**M**) using a 1/4" flat punch and rubber mallet.
- Tighten nuts (**A**) flush using a 9/16" socket and wrench.

BUSHING SET FOR BLADE STABILIZER BAR

NOTES:


- Use spreader block (**K**) to remove stabilizer bar from U-Channel.
- May need to drive out bearings (**M**) using a 1/4" flat punch and rubber mallet.
- Tighten nuts (**A**) flush using a 9/16" socket and wrench.
- Lower diagram is for 10' models only.

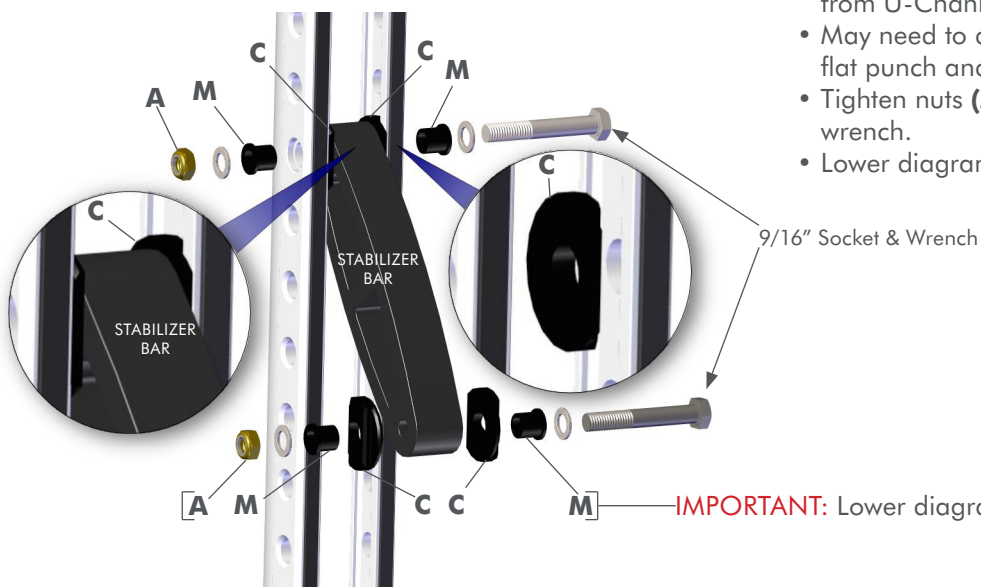

BUSHING SET FOR BLADE CYLINDER/STABILIZER BAR

NOTES:


- Use spreader block (**K**) to remove cylinder and stabilizer bar from U-Channel.
- May need to drive out bearings (**H**) using a 1/4" flat punch and rubber mallet.
- Tighten nut (**E**) flush using a 1/2" socket and wrench.

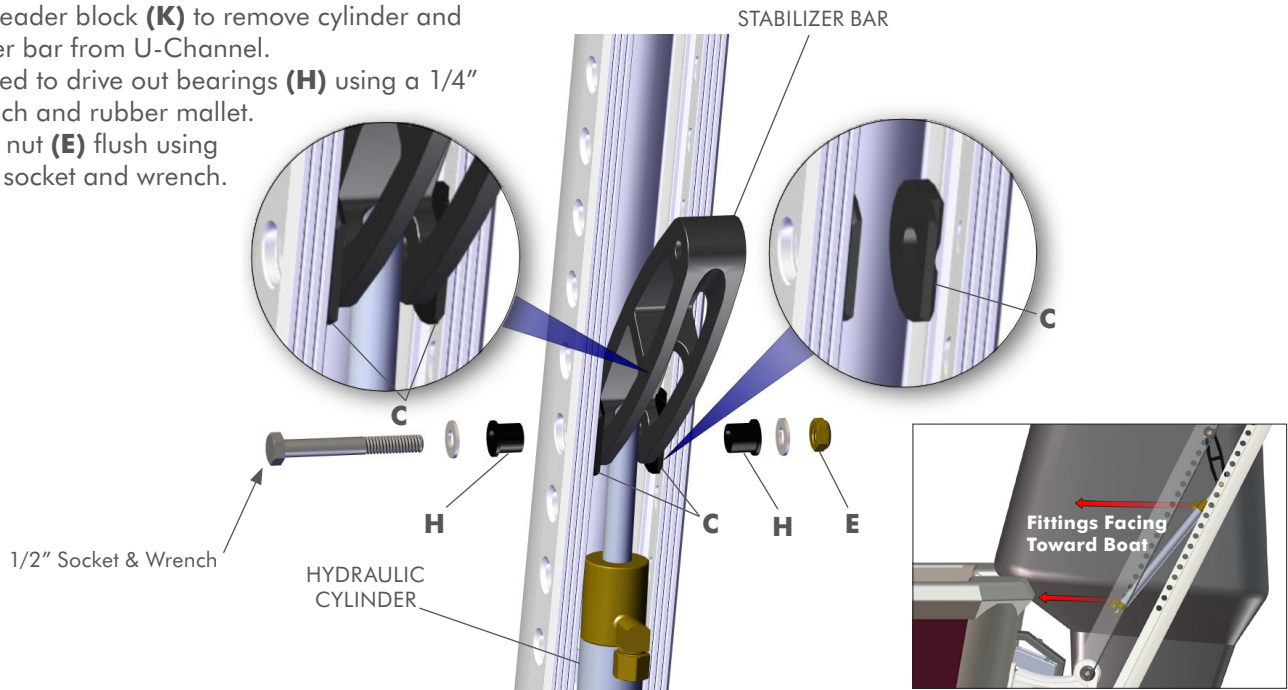

BUSHING SET FOR BLADE CYLINDER END CAP


NOTES:

- Tighten nut (**E**) flush using a 1/2" socket and wrench.
- Cylinder fittings should face stern of boat.

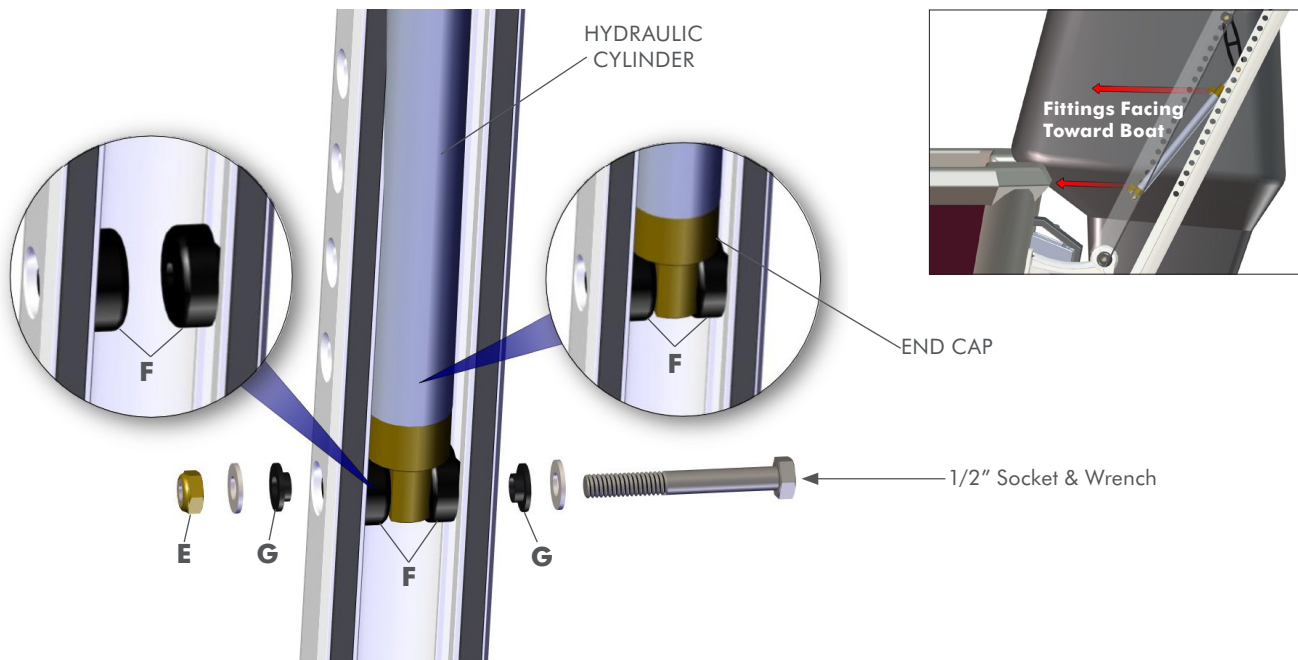

Need help? Contact our Customer Service Team at **1 + 813.689.9932 Option 2**

BUSHING SET FOR BLADE STERN BRACKET (Upper or Lower)

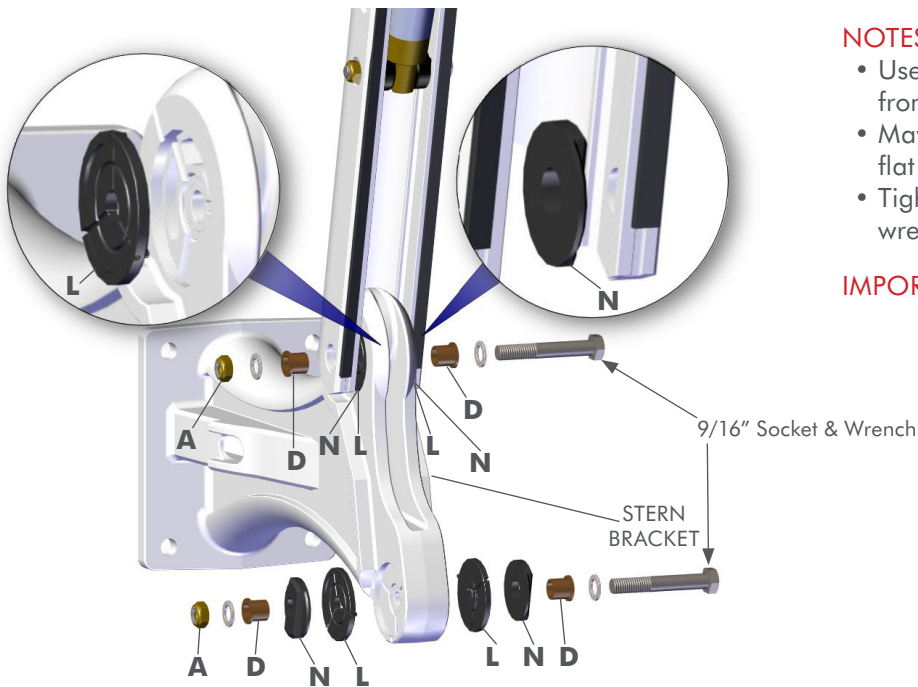


NOTES:

- Use spreader block (**K**) to remove u-channel from stern bracket.
- May need to drive out bearings (**D**) using a 1/4" flat punch and rubber mallet.
- Tighten nuts (**A**) flush using a 9/16" socket and wrench.

IMPORTANT: This diagram is for Solid Aluminum Stern Brackets. If your Stern Bracket is different than the one pictured and needs servicing contact Customer Service at **1+813.689.9932 Option 2.**

BUSHING SET FOR BLADE SPIKE

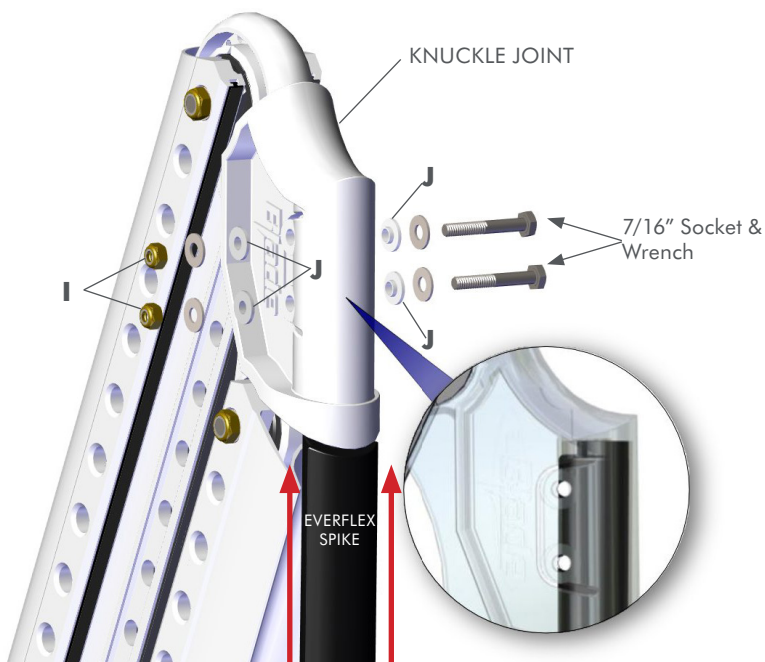

NOTES:

- If replacing Spike, apply Green Marine Fluid or grease to top portion of spike before inserting.
- Tighten nuts (**I**) snug using a 7/16" socket and wrench.

IMPORTANT: Use Bushings (**J**) on the nut side of bolt for metal knuckles **only**.

Everflex™ Spike NOT included with rebuild kit. If replacement is needed, visit an authorized dealer or call Product Support at **1+813-689-9932 opt. 2.**

Need help? Contact our Customer ServiceTeam at **1 + 813.689.9932 Option 2**