



SWIFT. SILENT. SECURE.

BOLT SET FOR BLADE STERN BRACKET (Upper or Lower) INSTRUCTIONS

- Bolt Set for Solid Aluminum Stern Brackets

Hardware (Included):

- A** (2) 3/8" x 2-1/2" Bolts
- B** (4) 3/8" Washers
- C** (4) 3/8" Bearings
- D** (4) 3/8" Bushings (Middle)
- E** (4) 3/8" Bushings (Inner Stern Bracket)
- F** (2) 3/8" Nylon Lock Nuts

Installation Tools:


- 9/16" Wrench
- 9/16" Socket
- Ratchet
- Spreader Block (Included)
- 1/4" Flat Punch
- Rubber Mallet
- Protective Gloves

IMPORTANT: Lower Power-Pole Anchor down so the spike is touching the ground.

WARNING: Do not touch spike with bare hands. Spike may become fibrous after sun exposure and use.

NOTE: Bearings (**C**) may need to be driven out using a 1/4" flat punch and rubber mallet.

Use spreader block to remove u-channel.

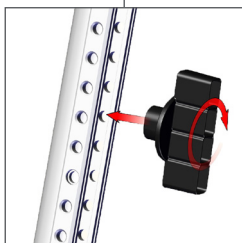

A



B



C



D




E



F



Installation Diagram

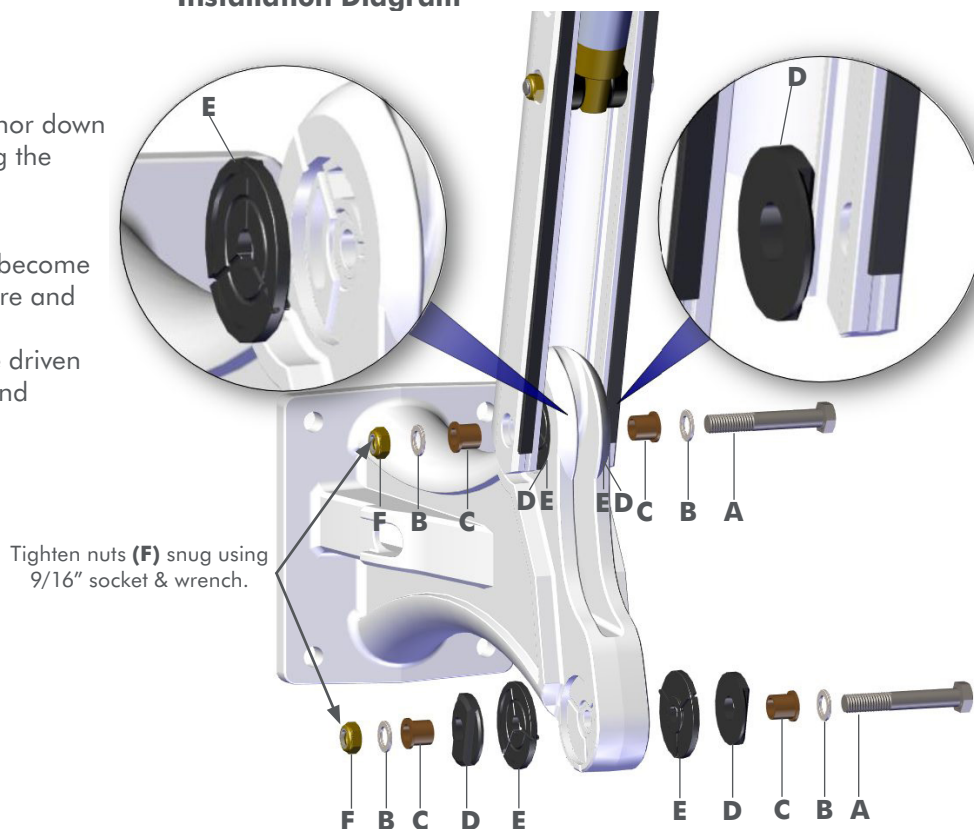

Need help? Contact our Customer Service Team at **1 + 813.689.9932 Option 2**