



SWIFT. SILENT. SECURE.

BOLT SET FOR 3/8" STERN BRACKET (UPPER OR LOWER) INSTRUCTIONS

Compatible With the Following Models:


- Power-Pole Pro Series 6', 8' (2010-2011)
- Power-Pole Signature Series (All Models)
- Power-Pole Pro II Series (All Models)
- Power-Pole Sportsman II Series 8'; (2012 & Later)

Hardware (Included):

- A.** (2) 3/8" x 3-1/2" Bolts
- B.** (4) 3/8" Washers
- C.** (4) Small Bushings
- D.** (4) Long Bushings
- E.** (8) Large Bushings
- F.** (2) 3/8" Nylon Lock Nuts

Installation Tools:

- 9/16" Socket with Ratchet
- 9/16" Wrench
- For 5/16" Models:**
- 9/16" Drill Bit
- 1/2" Drill Bit
- Electric Drill

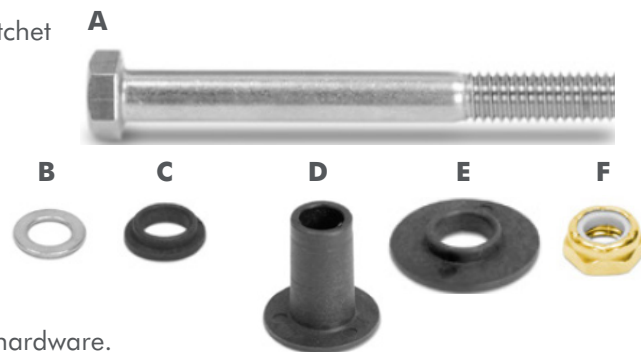

WARNING: Never touch spike with bare hands.

NOTES:

- Remove old hardware and follow installation diagram to install new hardware.
- Tighten nuts **(F)** snug using 9/16" socket and wrench.


Modification Procedures:

Step 1 If your current Power-Pole has a 5/16" bolt and the Stern Bracket hole is damaged, remove all hardware and drill out the stern bracket bolt hole (only) with 9/16" steel drill bit.

Step 2 Drill out both sides of U-channel (only) with a 1/2" steel drill bit.

Installation Diagram

IMPORTANT: For Sportsman II Models, use large bushings **(E)** instead of long bushings **(D)**.

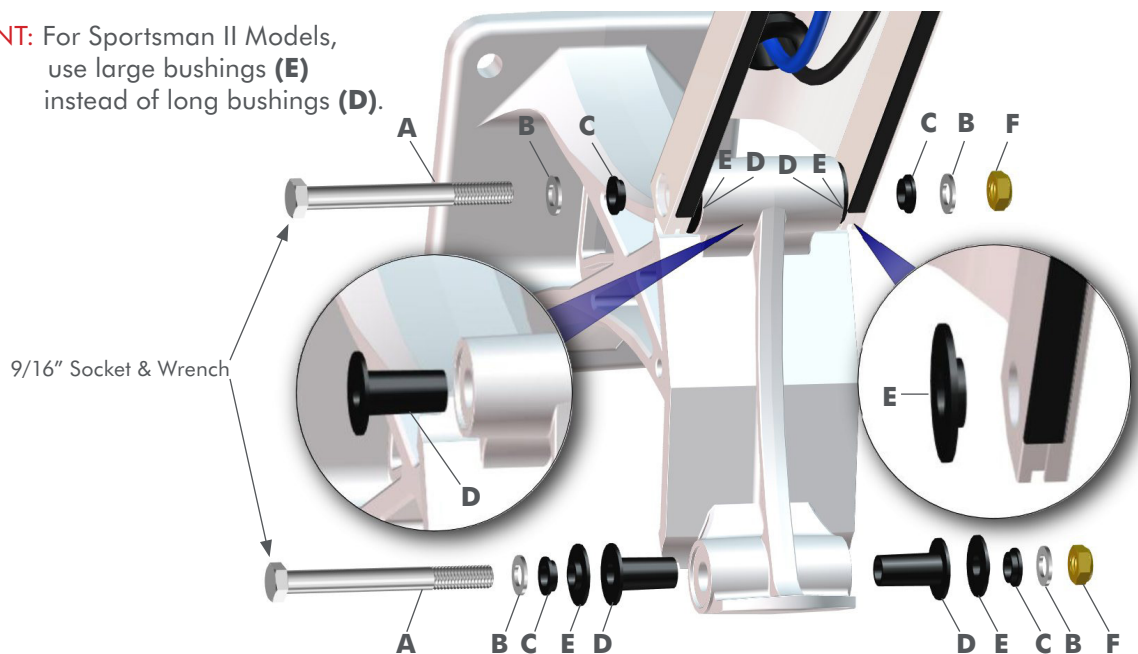

Need help? Contact our Technical Support Team at **1 + 813.689.9932 Option 2**