



SWIFT. SILENT. SECURE.

## BOLT SET FOR 5/16" CYLINDER INSTRUCTIONS

### Hardware (Included):

- A.** (1) 5/16" x 3-1/2" Bolt
- B.** (2) 5/16" Small Washers
- C.** (2) 5/16" Small Black Bushings
- D.** (2) Cylinder Ram Spacers
- E.** (1) 5/16" Thin Lock Nut

### Installation Tools:

- 1/2" Socket with Ratchet
- 1/2" Wrench

**WARNING:** Never touch spike with bare hands.


**IMPORTANT:** This bolt set is **only** for cylinders with hydraulic fitting on **top**.

### NOTES:

- Remove old hardware and follow diagram to install new hardware.
- Tighten Nut **(E)** Flush using 1/2" socket & wrench.



### Installation Diagram

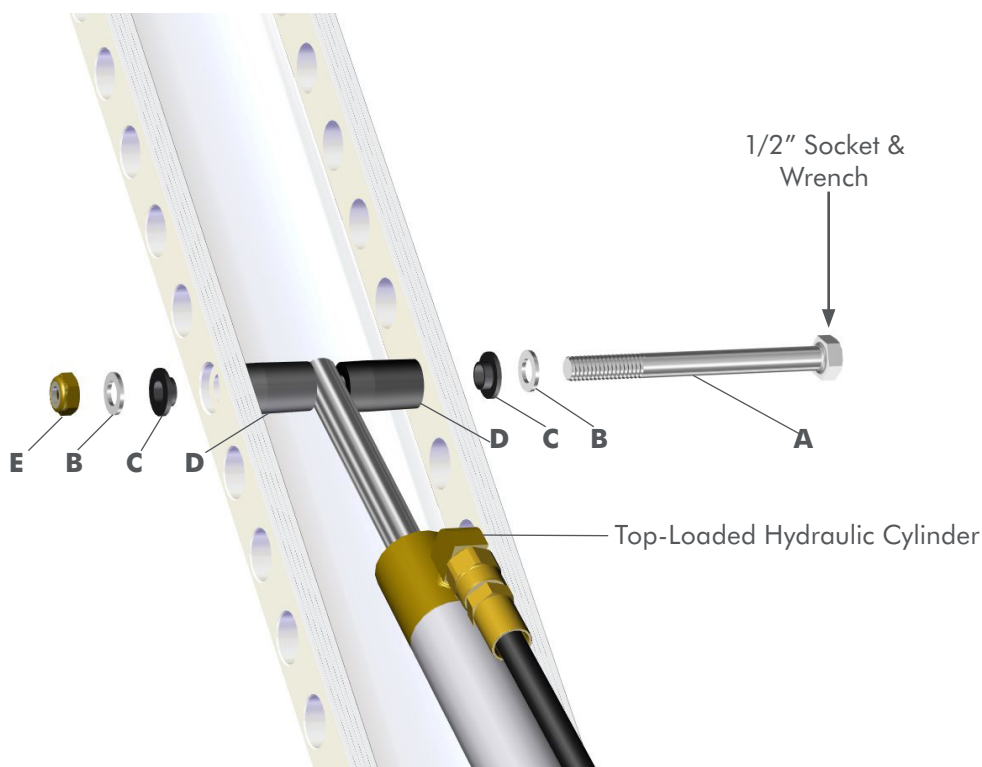

Need help? Contact our Technical Support Team at **1 + 813.689.9932 Option 2**



9010 Palm River Road, Tampa, Florida 33619  
phone 813.689.9932 • fax 813.689.8883 • power-pole.com  
©2018 all rights reserved. Power-Pole Shallow Water Anchor U.S. Patent No. 6,041,730