



SWIFT. SILENT. SECURE.

## DOWN HYDRAULIC HOSE REPLACEMENT INSTRUCTIONS

### PRESSURE RELIEF:

**STEP 1** Lower the Power-Pole Anchor® down so the Everflex™ spike is about a foot off the ground.

**STEP 2** Manually push the anchor into closed position, relieving pressure. Manually lower the anchor back to the ground.

### Installation Tools:

- 1/2" Wrench
- 5/8" wrench
- Wire cutters or Utility knife
- Zip Ties



DO NOT touch the spike with bare hands.

### REMOVAL:


**STEP 1** Remove the **Bottom Cylinder** from the **Upper U-Channel** using a 1/2" socket & wrench. **FIG 1 or 2**

**NOTICE:** For Blade models, push the bottom of the cylinder up into the U-Channel and slide it forward past the Ram Spacers to remove it.


**IMPORTANT!** Safely store all mounting hardware. It will be reused.

**STEP 2** Hold the **Lower Cylinder Fitting** with a **1/2" Wrench** and loosen the defective **DOWN Hose** from the fitting using a **5/8" Wrench**. **FIG 3**


**IMPORTANT!** Check to make sure the hose labeled DOWN is being removed.

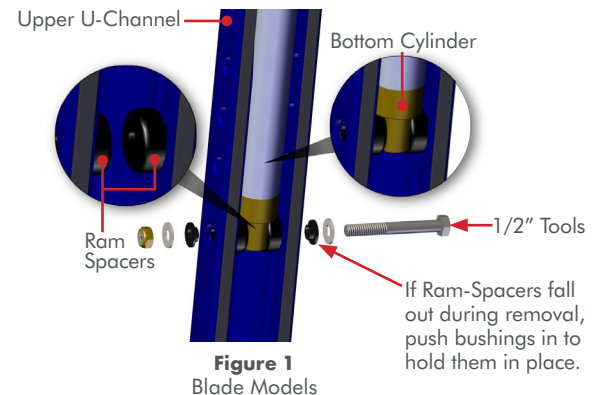

**Figure 1**  
Blade Models

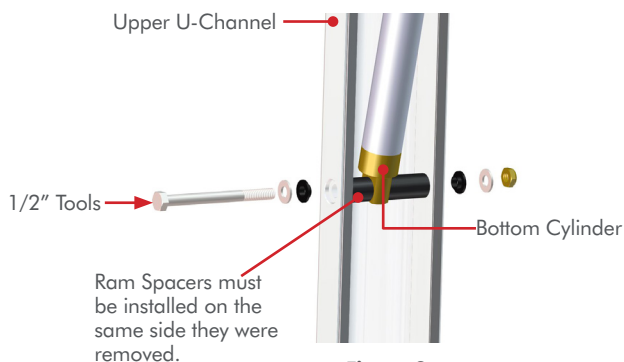

**Figure 2**  
Pro/Spn Models

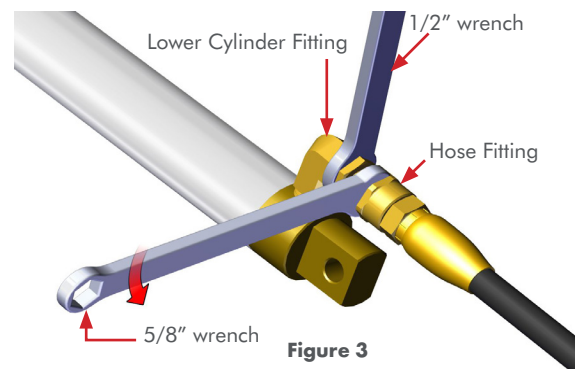

**Figure 3**

Need help? Contact our Customer Service Team at **1 + 813.689.9932 Option 2**

# DOWN HYDRAULIC HOSE REPLACEMENT INSTRUCTIONS (CONTINUED)

## REMOVAL (Continued):

**STEP 3** Cut both **Zip-Ties**. **FIG 4**

**STEP 4** Remove the defective **DOWN Hose** from the Power-Pole Anchor by pulling it through the U-Channel (Sportsman II/Pro II Models) or Stern Bracket (Blade Models).

**STEP 5** Remove the defective **DOWN Hose** from the **DOWN (Right) HPU Fitting** using a **5/8" Wrench**. **FIG 5**

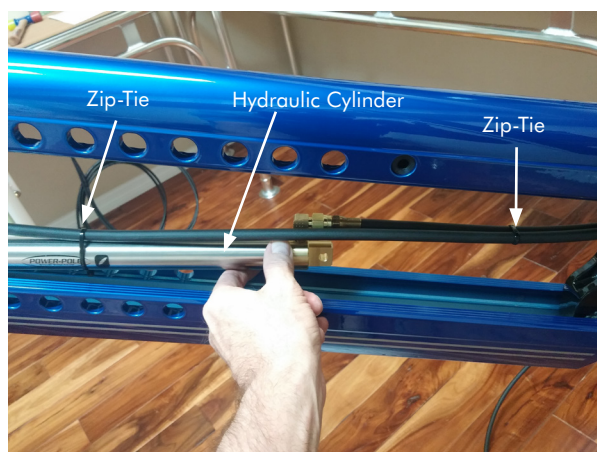


Figure 4

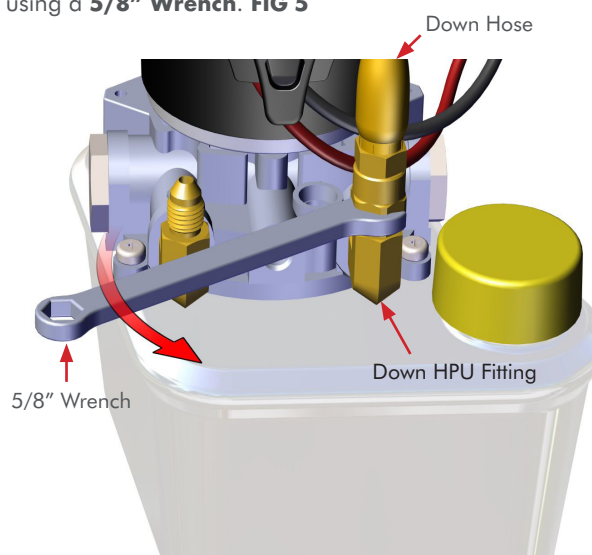


Figure 5

## INSTALLATION:

**STEP 1** Route the new **DOWN Hose** through the Power-Pole anchor as shown for your Power-Pole Anchor or Stern Bracket Model. (**FIG. 6, 7, & 8**)

**IMPORTANT!** Solid Aluminum and 3-Piece Stern Brackets require the DOWN Hose to be routed so that it is on top of the UP Hose when going through the Stern Bracket. **FIG 6 & 7**



Figure 6

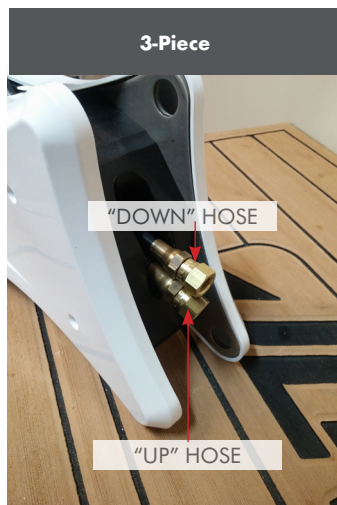


Figure 7



Figure 8

Need help? Contact our Customer Service Team at **1 + 813.689.9932 Option 2**

# DOWN HYDRAULIC HOSE REPLACEMENT

## INSTRUCTIONS (CONTINUED)

### INSTALLATION (Continued):

**STEP 2** Pull the **DOWN Hose** to the **DOWN Cylinder Fitting** and finger tighten.

**STEP 3** While holding the **DOWN Cylinder Fitting Base** with a **1/2" Wrench**, turn the **DOWN Hose Fitting** clockwise a quarter turn with a **5/8" Wrench**. **FIG 9**


**STEP 4** Secure the **UP & DOWN Hydraulic Hoses** together about 4" to 5" from the bottom of **Hydraulic Cylinder** using a **Zip-Tie**. **FIG 4**

**STEP 5** Push the Cylinder up into the U-Channel and re-install the Cylinder using a 1/2" Socket & Wrench. **FIG 1 or 2**

**STEP 6** Finger tighten the **DOWN Hose** to the **DOWN HPU Fitting Base**. **FIG 10**

**STEP 7** Turn the **DOWN Hose Fitting** clockwise a quarter turn with a **5/8" Wrench**. **FIG 10**


**STEP 8** Run the Power-Pole through several up and down cycles to purge any air that may be in the system. If you suspect the Anchor is still not running properly, full priming instructions can be found by scanning the QR Code below.

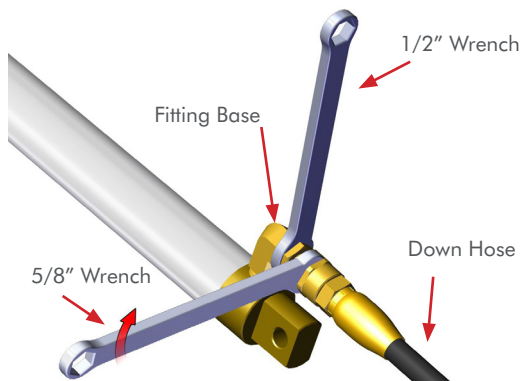

**Figure 9**



Priming Procedure

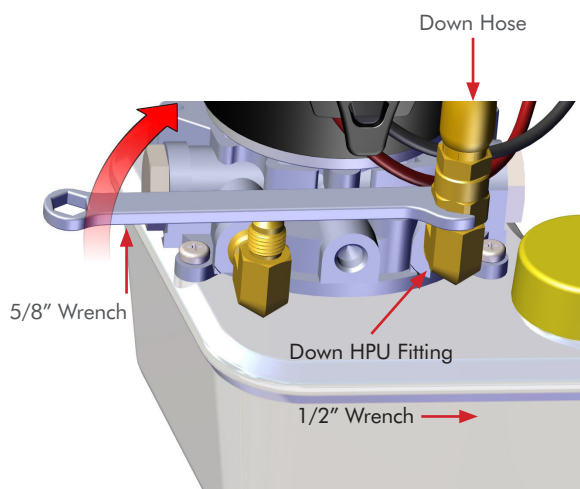

**Figure 10**

Need help? Contact our Customer Service Team at **1 + 813.689.9932 Option 2**