



SWIFT. SILENT. SECURE.

BLADE U-CHANNEL REPLACEMENT (UPPER OR LOWER) INSTRUCTIONS

- 8' Models 2012-Mid-2019
- 10' Models (2012-2016)

Installation Tools:

- 9/16" Wrench
- 9/16" Socket
- 1/2" Wrench
- 1/2" Socket
- Ratchet
- Spreader Block (Not Included)
- 1/4" Flat Punch

NOTICE: No mounting hardware is included in this kit.

REMOVAL & INSTALLATION:

STEP 1 Lower the Power-Pole Anchor® down so the Everflex™ spike is about a foot off the ground.



STEP 2 Follow diagrams (see reverse) to remove all hardware that attaches the U-Channel you are replacing (Upper or Lower).

IMPORTANT! A Spreader Block will be needed to install and remove the U-Channel to and from the Knuckle and Stern Bracket. **FIG A**

STEP 3 Install the new U-channel by following the diagrams (see reverse).

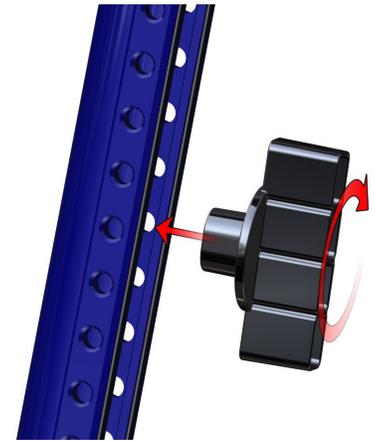


Figure A

Insert and Twist



QR Code A

Hardware Kit

IMPORTANT! Replace any hardware that is worn or damaged. Always replace nylon lock nuts. To order proper hardware, scan QR Code A.

Need help? Contact our Customer Service Team at **1 + 813.689.9932 Option 2**

BLADE U-CHANNEL REPLACEMENT (UPPER OR LOWER) INSTRUCTIONS

- 8' Models 2012-Mid-2019
- 10' Models (2012-2016)

Stabilizer Bar

(10' Models ONLY; 9/16" Tools; Upper or Lower Replacement)



Stern Bracket

(9/16" Tools; Upper or Lower Replacement)




Knuckle Removal

(1/2" Tools; Upper or Lower Replacement)




Cylinder With Stabilizer Bar

(1/2" Tools; Upper or Lower Replacement)

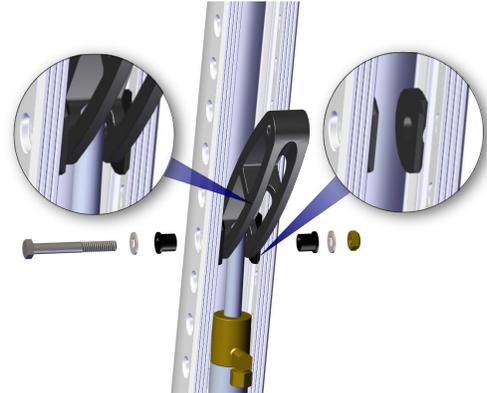

Cylinder End Cap

(1/2" Tools; Upper Replacement ONLY)

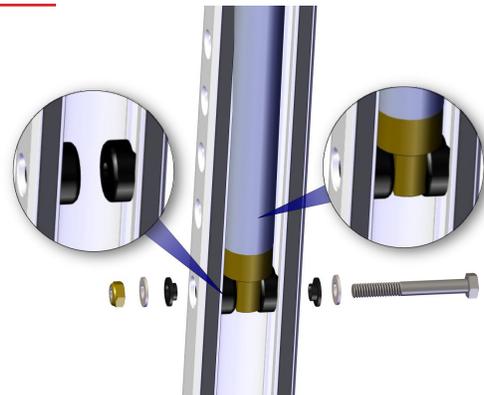

Need help? Contact our Customer Service Team at **1 + 813.689.9932 Option 2**