



SWIFT. SILENT. SECURE.

HARDWARE KIT FOR BRACED ADAPTER PLATES INSTRUCTIONS

Included Hardware:

- A** (2) 3/8" x 2" Bolts
- B** (2) 3/8" x 1-3/4" Bolts
- C** (4) 3/8" Heavy Washers
- D** (4) 3/8" Lock Nuts
- E** (4) 3/8" Neo-Bond Washers

Installation Tools


- 9/16" Socket
- Ratchet
- 9/16" Wrench

INSTALLATION INSTRUCTIONS:

STEP 1 Follow diagram specific to your Power-Pole Anchor stern bracket model to attach the anchor to the adapter plate and brace.


STEP 2 Tighten all hardware to 240 inch pounds/20 foot pounds of torque

Solid-Aluminum Stern Bracket Models

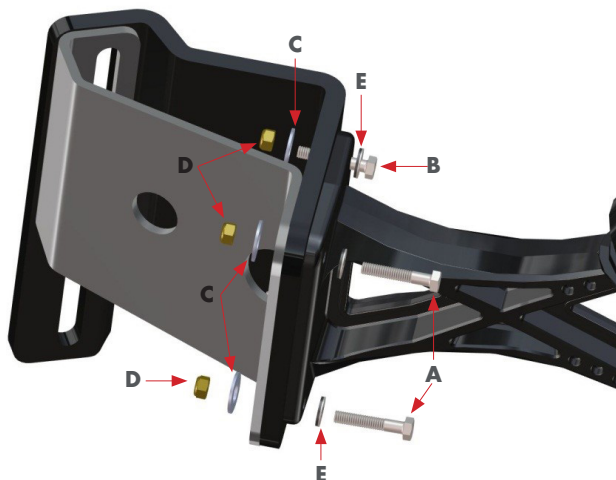

NOTICE: Ensure Neo-Bond side of washer is facing the Stern Bracket.

Three-Piece Stern Bracket Models

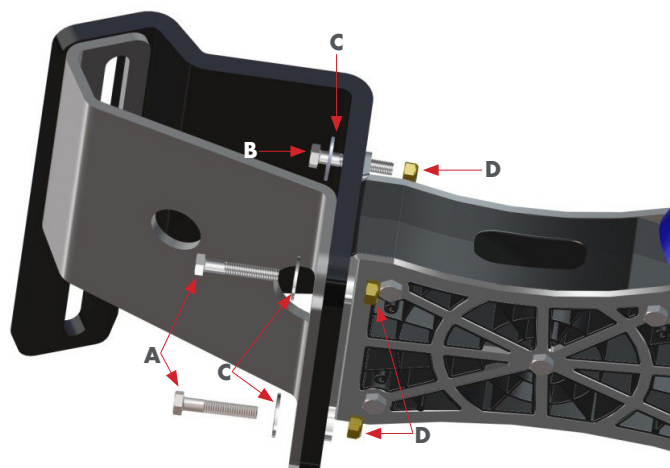

NOTICE: Neo-Bond Washers (E) not used on 3-piece stern bracket models.

Need help? Contact our Customer Service Team at **1 + 813.689.9932 option 2**