



SWIFT. SILENT. SECURE.

# HARDWARE KIT FOR BRACED ADAPTER PLATES

## INSTRUCTIONS

### Included Hardware:

- A** (2) 3/8" x 2" Bolts
- B** (2) 3/8" x 1-3/4" Bolts
- C** (4) 3/8" Heavy Washers
- D** (4) 3/8" Lock Nuts
- E** (4) 3/8" Neo-Bond Washers

### Installation Tools


- 9/16" Socket
- Ratchet
- 9/16" Wrench

### INSTALLATION INSTRUCTIONS:

**STEP 1** Follow diagram specific to your Power-Pole Anchor stern bracket model to attach the anchor to the adapter plate and brace.


**STEP 2** Tighten all hardware to 240 inch pounds/20 foot pounds of torque

#### Solid-Aluminum Stern Bracket Models

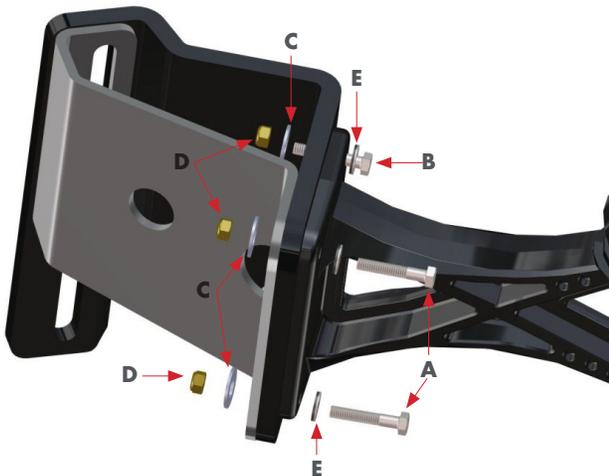

**NOTICE:** Ensure Neo-Bond side of washer is facing the Stern Bracket.

#### Three-Piece Stern Bracket Models

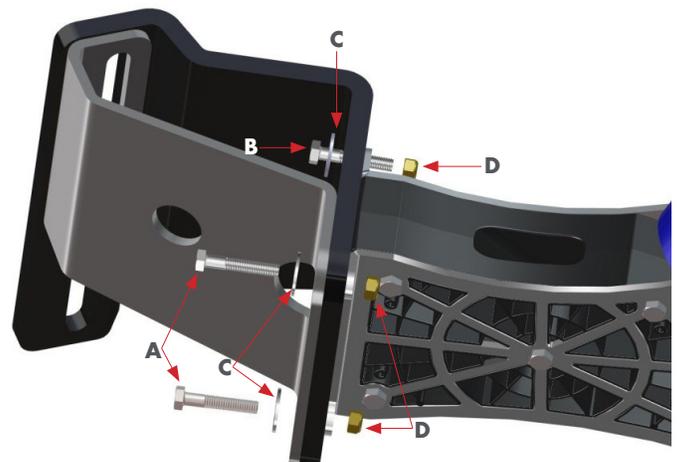

**NOTICE:** Neo-Bond Washers (E) not used on 3-piece stern bracket models.

Need help? Contact our Customer Service Team at **1 + 813.689.9932 option 2**