



PKB-D-0-4-U


INSTRUCTIONS

TOOLS

- Electric Drill
- 7/16" Drill Bit
- 9/16" Socket
- 9/16" Wrench
- Ratchet

INCLUDED HARDWARE

QTY.	LABEL	DESCRIPTION
4	A	5" All-Thread Hex Head Cap Screw
12	B	3/8" Heavy Washers
2	C	Backing Plate
10	D	3/8" Lock Nuts
2	E	3/8" x 2" Bolts
2	F	3/8" x 1 - 3/4" Bolts
1	G	Adapter Plate
1	H	Adapter Plate Brace
4	I	Neo-Bond Washers

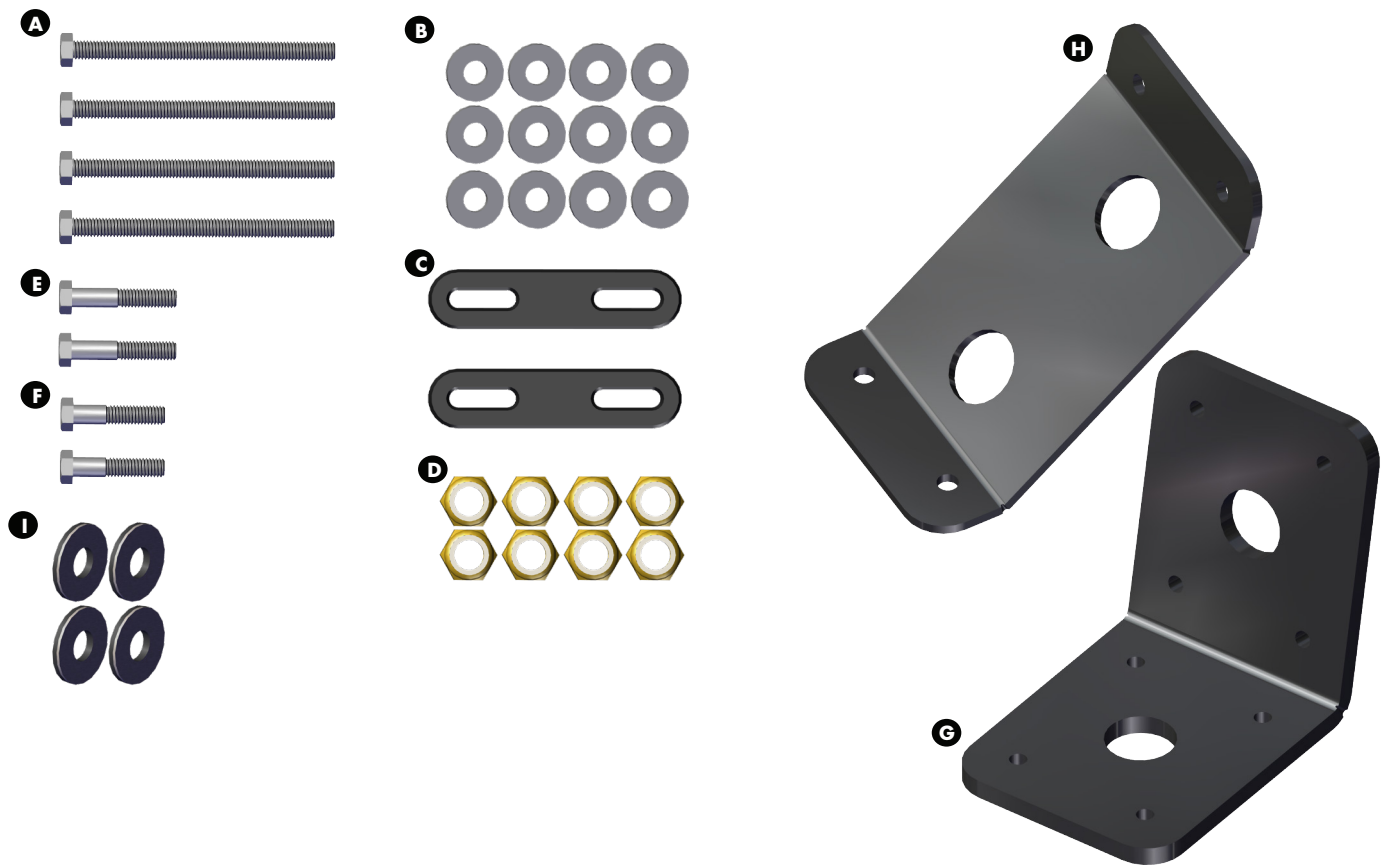

Need help? Contact our Customer Service Team at **1 + 813.689.9932 Option 2**

PKB-D-0-4-U

INSTRUCTIONS



DRILL MOUNTING HOLES

STEP 1 Determine a proper mounting location for the Adapter Plate, checking to ensure there are no obstructions where holes will be drilled and the Power-Pole will not interfere with the operation or steering of the outboard motor.

STEP 2 Using the Adapter Plate as a guide, drill four mounting holes for Thru-Bolts using a **7/16"** Drill Bit.

INSTALL ADAPTER PLATE

STEP 3 Install the front two **All-Thread Bolts A** through a **Washer B**, **Adapter Plate G**, **Boat Deck** and a **Backer plate C**. Then install a **Washer B** and **Lock Nut D** and tighten until snug using a **9/16"** Socket and **Wrench**. **FIG 1**

STEP 4 Install the **Adapter Plate Brace H** into place and then install the rear two **All-Thread Bolts A** through a **Washer B**, the **Adapter Plate Brace H**, **Adapter Plate G**, **Boat Deck** and a **Backer Plate C**. Then install a **Washer B** and **Lock Nut D** and tighten until snug using a **9/16"** Socket and **Wrench**. **FIG 2**

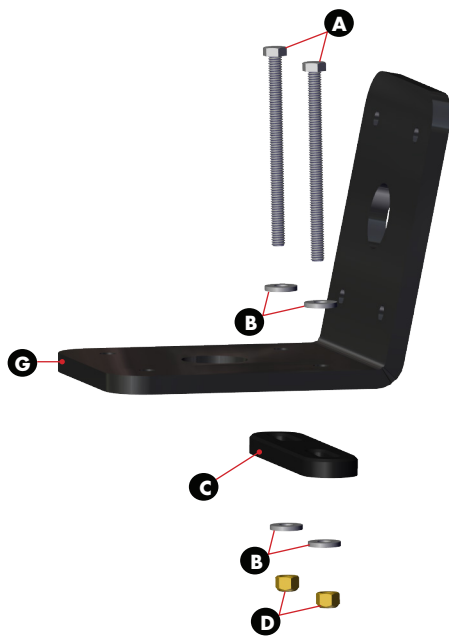


Figure 1

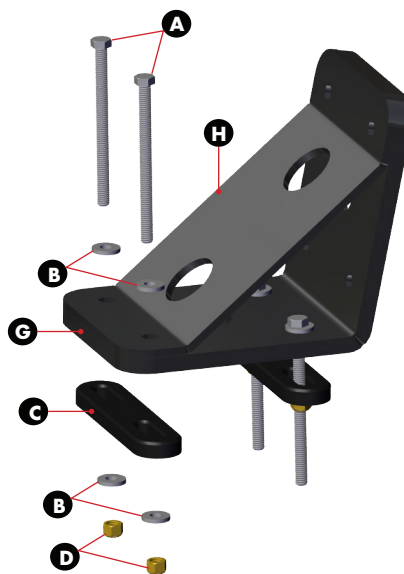


Figure 2

PKB-D-0-4-U

INSTRUCTIONS


INSTALL POWER-POLE TO ADAPTER PLATE

STEP 1 Follow diagram specific to your Power-Pole Anchor stern bracket model and attach the connector to the Adapter Plate.

NOTE: Use longer Bolts **E** for the upper two holes and shorter Bolts **F** for the lower two holes.


STEP 2 Tighten all hardware to 240 inch pounds/20 foot pound of torque using a **9/16"** **Socket** and **Wrench**.

Blade Models

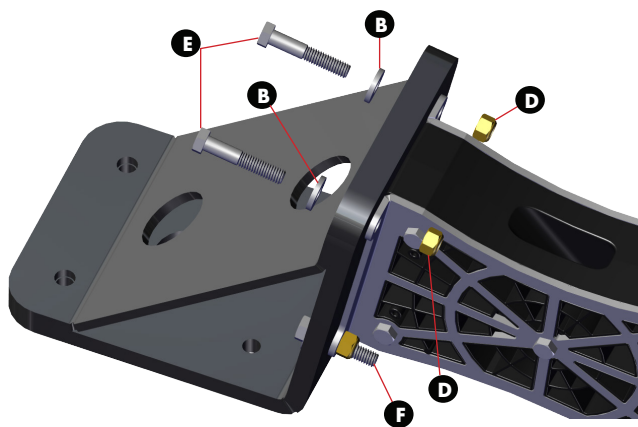

IMPORTANT! Neo-Bond Washers **I** are not required for Blade models.

Pro & Sportsman Models

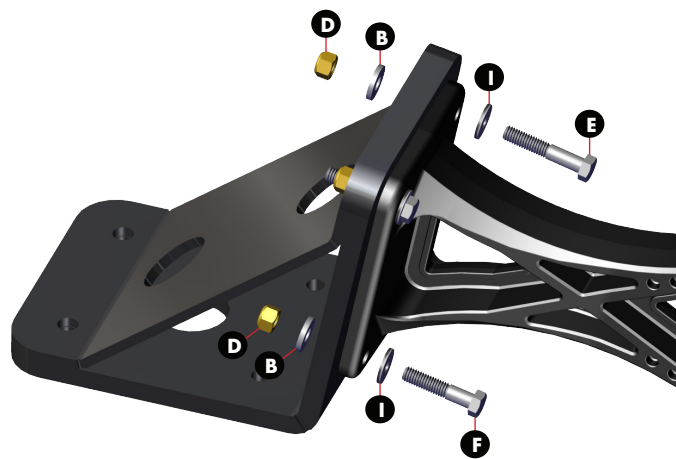

IMPORTANT! Ensure neo-bond side of Washers **I** are facing the stern bracket and Bolts **E** and **F** are oriented inward.