



SWIFT. SILENT. SECURE.

## NON-MERCURY M TO S BRACKET (Single or Dual) INSTRUCTIONS

### Hardware (Included)

- A. (2) Adapter Brackets (Dual)  
(1) Adapter Bracket (Single)
- B. (1) Shim (Single **Only**)

### Installation Tools

- 3/4" Socket
- 3/4" Wrench
- Ratchet
- Marine Grade Sealant



### NOTES:

- Properly support outboard engine according to manufacturer's guidelines
- BMS Jack Plates require 3/4" spacer kit (**AP-spacer-34-kt**).

### Installation Instructions

**STEP 1:** Completely remove transom/engine bolts from one side and loosen opposite side 3/4".

**STEP 2:** Insert Adapter Bracket (**A**) between transom/jack plate and motor. Re-install transom/engine bolts.

**NOTE:** For transom install, apply a marine grade sealant around each transom bolt hole.

**STEP 3:** Repeat steps 1 & 2 for the other adapter bracket (**A**) or shim (**B**). Fully tighten all transom/engine bolts to manufacturer's specifications.


Need help? Contact our Technical Support Team at **1 + 813.689.9932 Option 2**



SWIFT. SILENT. SECURE.

# NON-MERCURY M TO S BRACKET (Single or Dual) INSTRUCTIONS

## Transom/Jack Plate Mounting Illustration

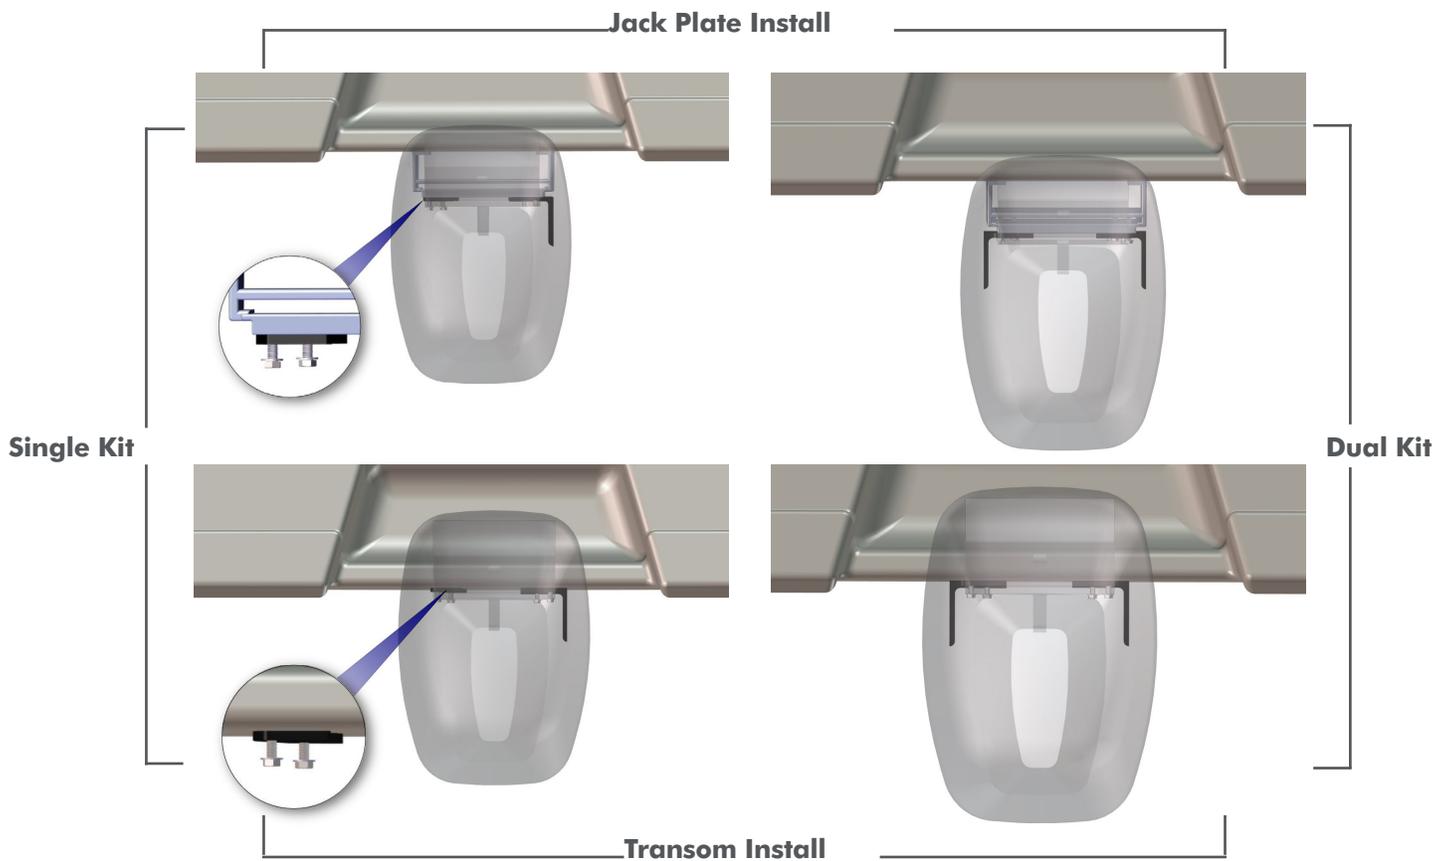

Need help? Contact our Technical Support Team at **1 + 813.689.9932 Option 2**



9010 Palm River Road, Tampa, Florida 33619  
phone 813.689.9932 • fax 813.689.8883 • power-pole.com  
©2018 all rights reserved. Power-Pole Shallow Water Anchor U.S. Patent No. 6,041,730